



6 Meal Automatic Pet Feeder

User Guide



Thank you for purchasing the All Pet Solutions 6 Meal Automatic Pet Feeder®.




This User Guide is intended to provide you with guidelines to ensure that operation of this product is safe and does not pose risk to the user.

Any use that does not conform to the guidelines described in this User Guide may void the limited warranty.

Please read all directions before using the product and retain this guide for reference. This product is intended for household use only.

This product is covered by a limited one-year warranty.

Product Overview

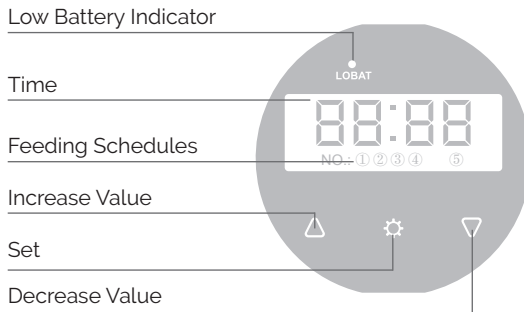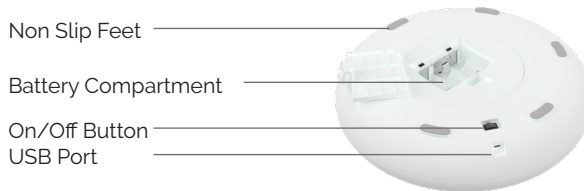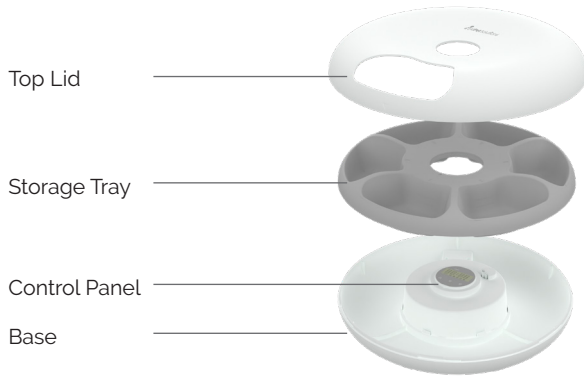

Important Safety Information

- Do NOT use this device for puppies and kittens under 7 months.
- Do NOT immerse control panel in water. The base of the unit should NOT be submerged in water at anytime, as this may damage electronic components.
- Do NOT place anything on top of the pet feeder.
- Dispose of all packaging materials properly. Some items may be packed in polybags; these bags could cause suffocation; keep away from children and pets.
- To reduce the risk of injury, close supervision is necessary when an appliance is used by or near children.
- Intended for use with dogs or cats only.
- Do NOT use outdoors. **FOR INDOOR HOUSEHOLD USE ONLY.**
- Pet feeder should be placed on a level surface.
- Before leaving for extended time, always replace batteries with new batteries.
- Do NOT disassemble the pet feeder other than components as instructed in this operating guide.
- Do NOT unplug by pulling on power cord. To unplug, grasp the plug, not the power cord.
- Do NOT operate if it has a damaged power cord or plug.
- Do NOT place or store the feeder where it can fall or be pulled into a tub or sink.
- Examine the pet feeder before installation. Do NOT plug in if there is water on the power cord or plug.
- To avoid tripping, always position power cord out of the way.

Caution


- Do NOT allow pets to chew on or swallow any parts.
- Do NOT attempt repairs on the pet feeder yourself.
- Do NOT install or store pet feeder where it will be exposed to weather or temperatures below 5°C.
- Do NOT lift pet feeder by lid. Lift and carry feeder using both hands and hopper base, while keeping unit in upright position.

Product Set Up


Before using the automatic feed dispenser:

Plug in the Micro-USB cable or insert 3 C size batteries.

Press on the lid of the device with both hands and turn it in the direction of the arrow on the lower part. When the arrows on the bottom and top parts meet, you can lift the lid off.

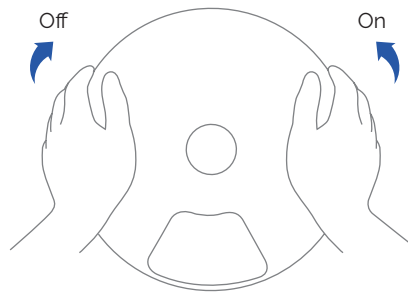

To remove the food tray simply align the arrows and lift it up.

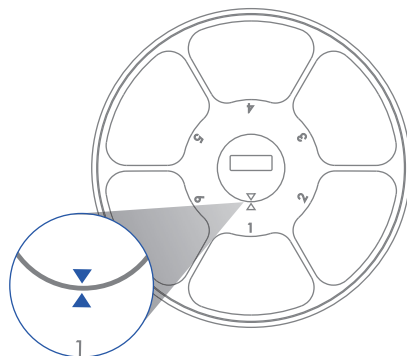

Reassemble the unit. Switch on the main switch at the bottom and press and hold the "up" button for 1 second to check the food tray rotates properly.

Fill in the desired number of portions and lock the lid by turning it again.

Unlocking the screen

Press and hold the “up” and “down” buttons at the same time for 1 second to unlock the screen, then follow the on screen instructions to change the settings.

Please note that after 30 seconds of inactivity the screen will enter standby mode.

Setting the current time

1. Press “set” button and the hour digit will flash.
2. Press the “up” and “down” arrow keys to change to the current hour and press “set” to save.
3. Once the hour is set the minutes will flash, use the arrow keys to set the time to the current minute and press “set” to save.



Programming the feeding times

1. Once the current time is set, the hour digits and “1” will flash, use the “up” and “down” arrows to set the time for the first meal. Press “set” to save the first meal time.



2. Once the first meal time is saved, the "2" will flash to indicate that the second meal time is now being set, repeat the step above to continue scheduling meal times.
3. Alternatively if you do not want to set all feeding times (minimum 1 scheduled meal), press and hold "set" button to save the feeding times set so far and return to the time display.
Please note: Up to 5 meal times can be scheduled

Manual feeding

Press the upward arrow for 1 second. A single portion will be dispensed. If the food tray doesn't rotate, please press "up" and "down" arrows at the same time to unlock the control panel.

Factory reset

1. Press "set" so that the hour digits flash.
2. Hold "up" and "set" buttons at the same time for 3 seconds to clear all programmed meal times and settings.

Please note: The feeder won't rotate when your pet's paws are inside the food tray in order to prevent injuries. The screen will show [E1:30] error and will return to normal after 30 seconds' countdown.

Cleaning/Maintenance Instructions

1. Be sure the unit is turned off and power is disconnected before attempting to clean.
2. Remove lid and feed container as described above.
3. Wipe with a soft cloth dipped in a small amount of soapy water. Do not use a fully soaked cloth.
4. Food tray can be removed for cleaning and is dishwasher safe.
5. Never submerge the base of this unit in water as it contains vital electronics and may short circuit.
6. Ensure that all parts are clean and fully dry before attempting to operate or re-fill the food compartment.



All Pet Solutions Ltd, 203 Riverside Way,
Uxbridge, UB8 2YF, United Kingdom

www.allpetsolutions.co.uk